

# SERIAL NUMBER & GEN CODE GUIDE


## LOCATION OF THE DATA PLATE AND GEN CODE



### DATA PLATE AND GEN CODE (SMART SUCTION ONLY) LOCATION


#### 1 MICRO SMART

Data plate on side of unit.  
Gen code 8-digit hexadecimal number found on the front of the control panel.

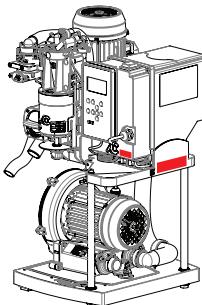


#### 2 MICRO & TURBO SMART CUBE

Data plate on outside of acoustic housing.  
Gen code 8-digit hexadecimal number found on the front of the control panel.

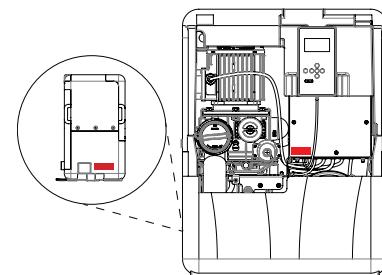


#### 3 TURBO SMART

Data plate above suction outlet.  
Gen code 8-digit hexadecimal number found on the front of the control panel.

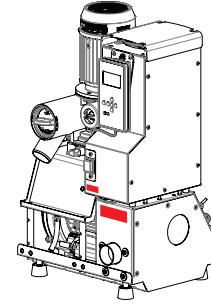


#### 4 TURBO SMART HP

Data plate on side of unit.  
Gen code 8-digit hexadecimal number found on the front of the control panel.

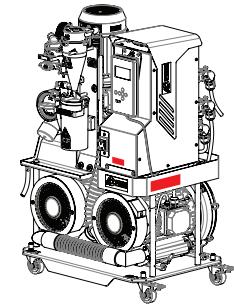


### DATA PLATE LOCATION

#### 5 TURBO JET

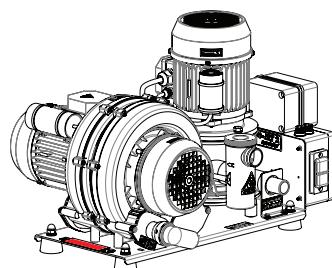


#### 6 AC & CADCAM COMPRESSORS

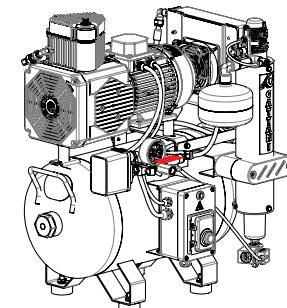


#### 7 LARGE PLANT COMPRESSORS

Data plate on control panel (top or bottom  
- model dependent). Ensure you use the  
"compressor" data plate and not the "control  
panel" data plate.

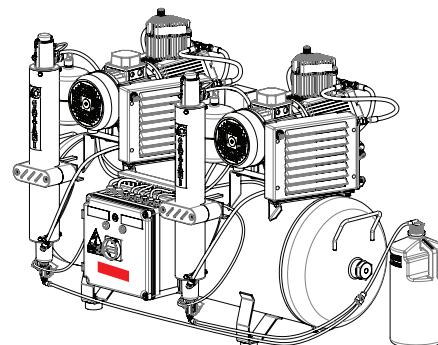


#### 8 K SERIES COMPRESSORS

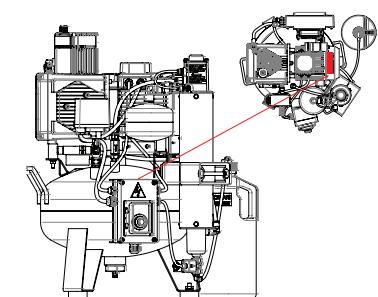

# SERIAL NUMBER & GEN CODE GUIDE

## HOW TO READ THE DATA PLATE

### COMPRESSOR DATA PLATE EXAMPLE

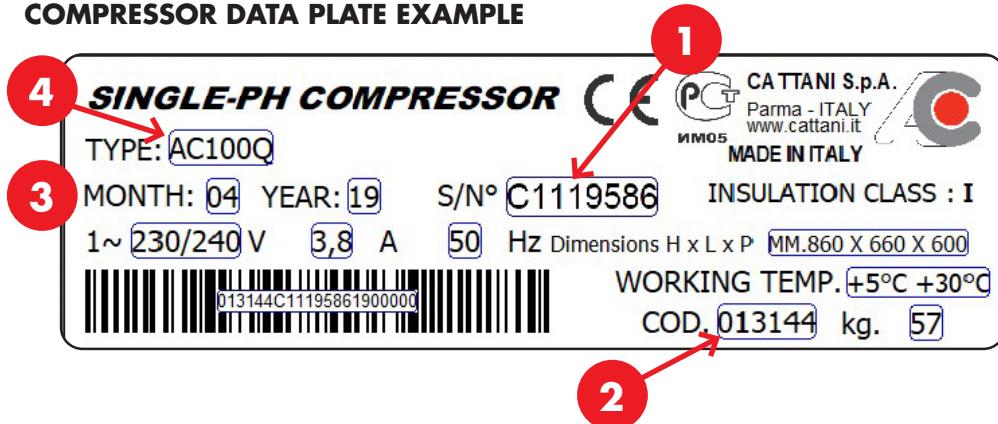

### SUCTION DATA PLATE EXAMPLE

